

Oven Safe Cleaner

PERFECT CLEANING OF CONVECTION, COMBINATION
AND CONVENTIONAL OVENS.



INSTRUCTIONS:

OVEN SAFE CLEANER
removes high protein soil from all
types of ovens including Convection,
Combination and Conventional.

- 1** Before cleaning, ensure the oven is properly cooled down and turned off.
(Consult your ovens owner's manual for proper cool down procedures).
- 2** Remove all interior parts and wash, rinse, and sanitize.
(Consult your ovens owners manual for the parts that need to be removed and cleaned).
- 3** Remove any spills with disposable paper wipes or damp cloth.
- 4** Carefully spray product onto oven surfaces except for door seals, gaskets, fan openings, catalysts, light bulbs, or heating elements.
- 5** Allow product to penetrate for 1-5 minutes.
- 6** Agitate with a non-abrasive nylon scrub pad/sponge and wipe with a damp cloth.
- 7** Wipe off/rinse surfaces with a clean damp cloth and clean, warm water.
- 8** Wipe oven exterior with **Apter Painless Stainless Cleaner**.

TIPS:

- Do not use tools
- Do not use sharp implements, abrasives or metal scouring brushes.
- Use a non-abrasive scrub pad/sponge to clean the affected areas.
- Do not let product dry on surface.
- Do not spray product on fan openings or light bulbs, catalysts, door seals, or gaskets.

Approved for use by the major manufacturers of convection and conventional ovens including Alto-Shaam, Merrychef, Amana and TurboChef.